



# EMS Hotplate

---

## Safety

- Wear eye protection.
- Be careful of high temperatures.
- Be aware of possible pinch points.

## Allowed Materials and Processes

Any Photoresist is permitted to be used on the EMS Hotplate.

## Operating Procedures

1. Push P. Key for about 5 secs. (Green display will show decimal point)
2. Push P Key again. (Green display shows 0)
3. Push up key until green display reads 381
4. Push P (you are now into the program menu)
5. Cycle through program menu using the up key
6. NSP (number of set points) Change to required no.
7. Push P now set the temperatures required
8. Then set temperatures of each set point
9. All you need to do now is go to PAN menu and change USrb to CHSP
10. (Change set point using the U Key)
11. By holding down the up key after you have changed all your settings. It will send you back to the run conditions.

## To Adjust Setpoint Temperature

1. Press P
2. Use up/down arrows to adjust to new temperature
3. Press P again

\*Plate will now ramp to new temperature

## Shutdown and Cleanup

1. Turn off EMS Hotplate

## Version History

- 2025.2 – Converted to Accessible PDF Version by Owen Bunn.



**MONTANA**  
STATE UNIVERSITY

Montana  
Microfabrication  
Facility